

200mm

200mm

240mm

200mm

240mm

200mm

350mm

SONIC

ART. NO. 4800707

Operation

1. Adjust height by pulling up on ratchet bar.
2. Push down on the locking handle. The weight of the locking handle should secure the ratchet bar in desired position. Ensure ratchet is secure before loading.
3. Carefully position stands so that load is centered on stand's saddle.
4. Slowly lower the vehicle onto the stands.
5. Ensure vehicle is secure before working on, around or under. When used to support vehicle, use wheel chocks to prevent inadvertent movement.

Note: Jack stands are not to be used to simultaneously support both ends or one side of a vehicle. No alterations shall be made to this device. Do not use adapters or accessories on the saddle or base frame. No replacement parts are available for this device. Replace as a matched pair only.

To lower load

1. Raise vehicle clear of stands with suitable jack.
2. Raise the locking handle to release stopper and allow ratchet to glide down to lowest position.
3. Carefully remove stands.
4. Carefully lower vehicle with jack.
5. Ensure that all tools, equipment and personnel are clear before lowering load.

4800707



4 713268 479353

WWW.SONIC-EQUIPMENT.COM




SONIC

Art.No. 4800707

3 Ton

JACK STANDS
Lift Range: 305 mm to 450 mm

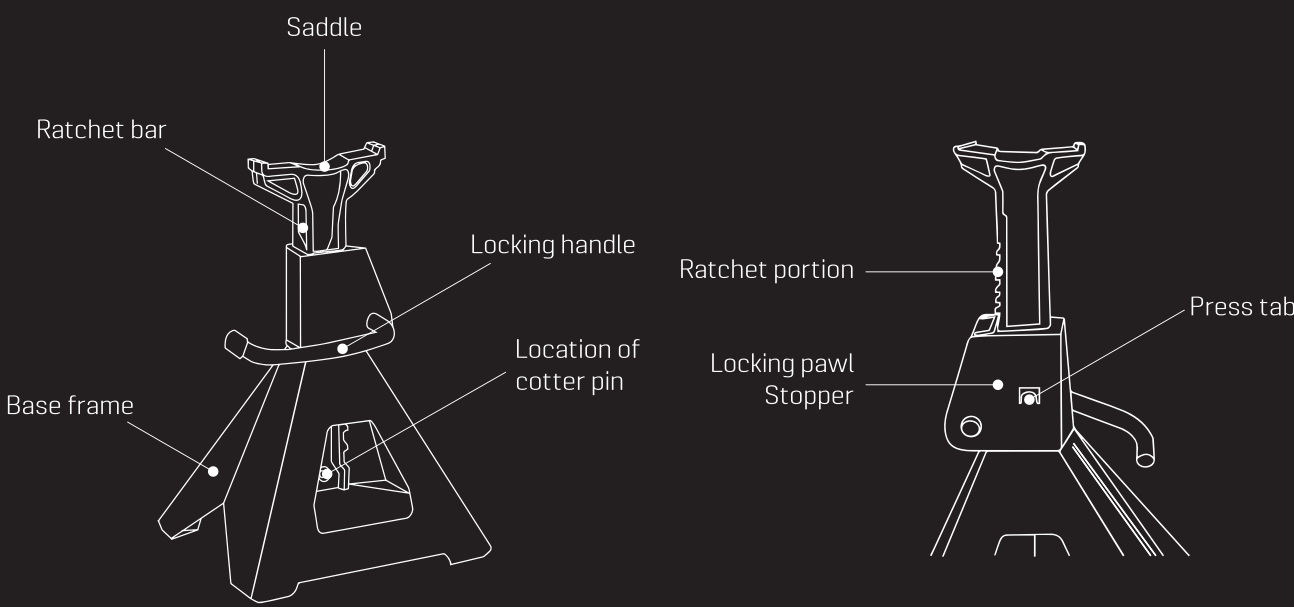

- Study, understand, and follow all instructions before operating this device.
- Do not exceed rated capacity.
- Use only on hard level surface.
- Center load on saddle.
- Use as a matched pair to support one end of vehicle only.
- Do not alter or modify stand.
- Failure to heed these warnings may result in serious or fatal personal injury and/or property damage.

SONIC

ART. NO. 4800707

Art.No. 4800707

3 Ton

JACK STANDS
Lift Range: 305 mm to 450 mm



Technical data

Model	4800707
Lift capacity	3 tons
Min. lift height	305mm
Max. lift height	450mm