


PART LIST


Ref#	Description	Part#	QTY
1	Hexagon bolt with flange screw (M6X25)		4 pcs
2	34"frame of Cabinet with door	47379	1 pc
3	34"Skirting board	47303	1 pc
4	34"SS work plate	47381	1 pc
5	34"Closet side board	47389	1 pc

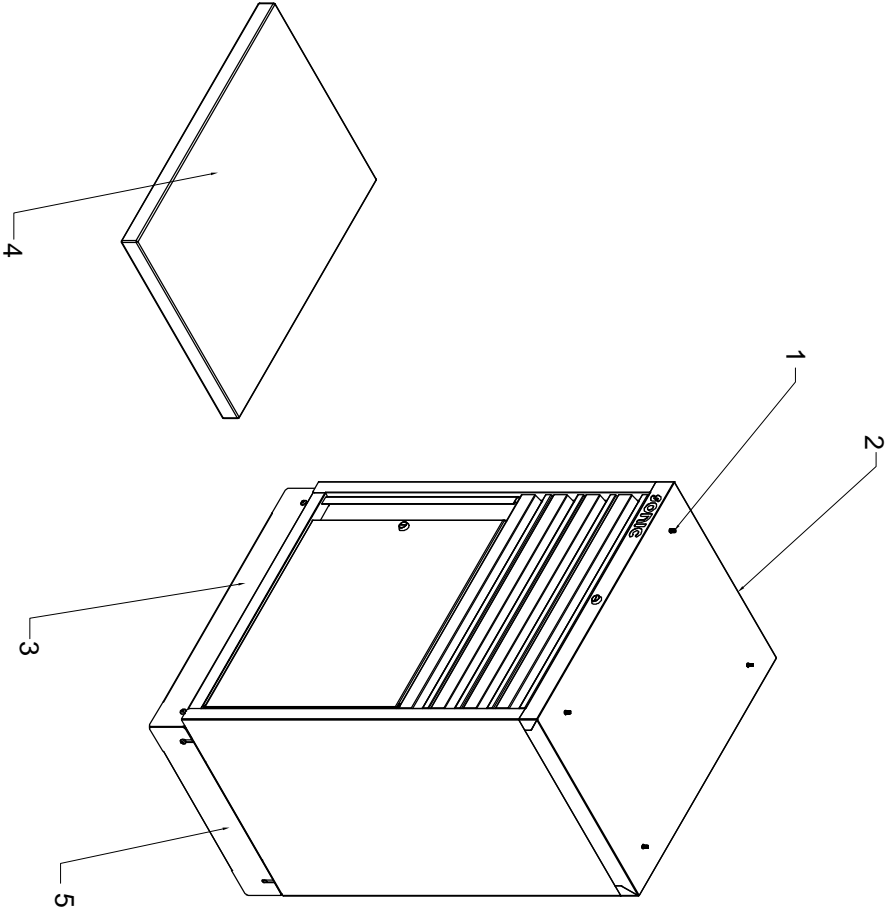

ASSEMBLY INSTRUCTIONS


1. ADJUST LEVELER

Adjust the levelers and make the whole unit to stable state.

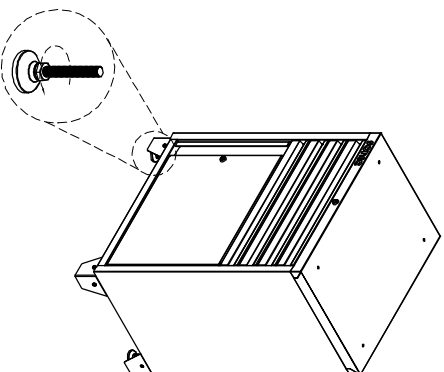


2. PRE-DRILL HOLES OF SS WORK PLATE

Pre-drill four small holes under the SS work plate for easily installing.

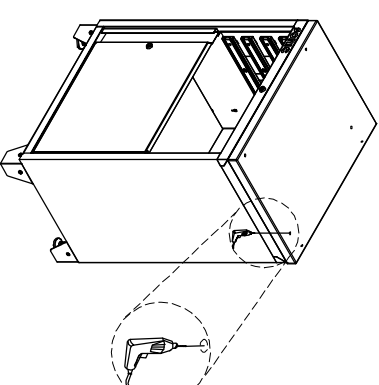

3. INSTALL SS WORK PLATE

Position the SS work plate on the top of cabinet. Remove the top drawer of cabinet. Insert the Hexagon bolt with flange screw (M6X25) through the top of cabinet, and into the bottom of the SS worktop. Tighten securely. Reinstall the drawers.

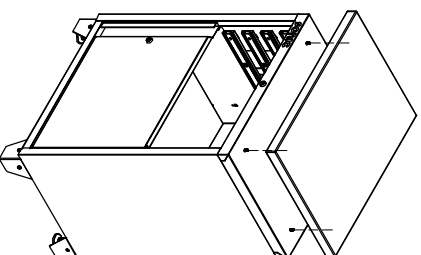

4. INSTALL SKIRTING BOARDS

Position the skirting boards on the legs of cabinets. Insert the truss head screw (M6X12, stainless) through the legs. Tighten securely. Repeat the steps for other skirting boards.

