



PART LIST

Ref#	Description	Part#	QTY
1	Hexagon bolt with flange screw (M6X25)		4 pcs
2	26" Closet frame	47288	1 pc
3	26" Skirting board	47289	1 pc
4	26" SS work plate	47377	1 pc
5	26" Closet side board	47389	1 pc

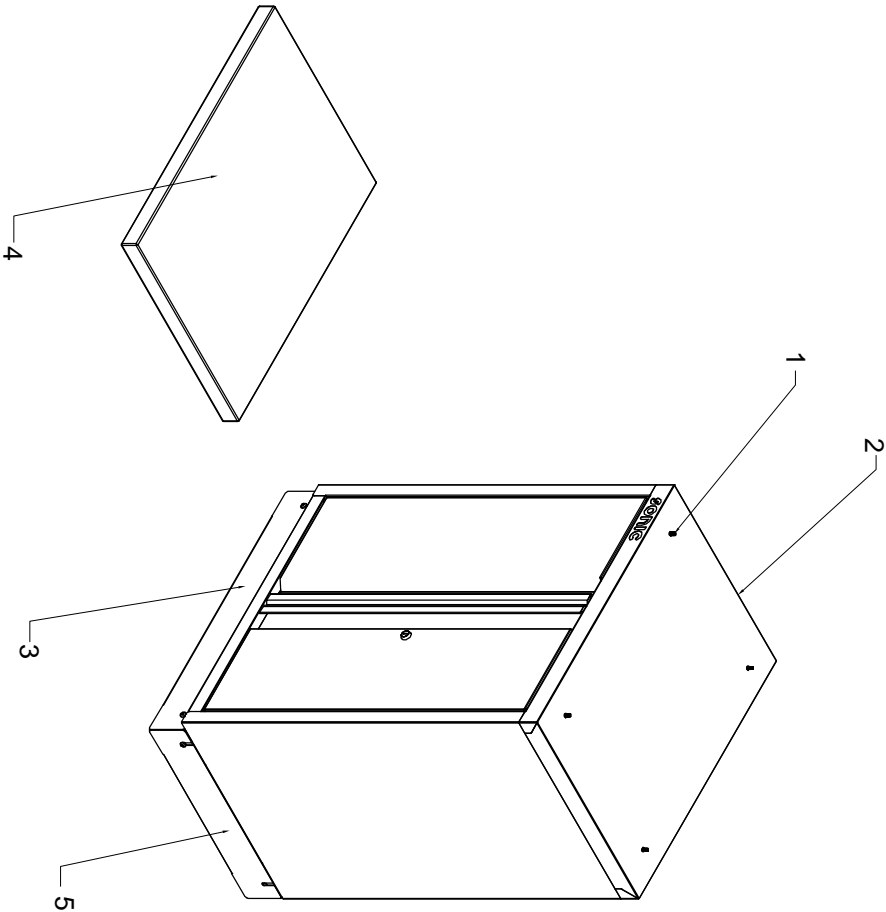


### 1.INSTALL ADJUSTABLE SHELF

Decide the height of the adjustable shelf onto the tongues on both side panels. Insert the bolts into the side panels. Place the shelf on the bolts. Make sure slot B go into box first.

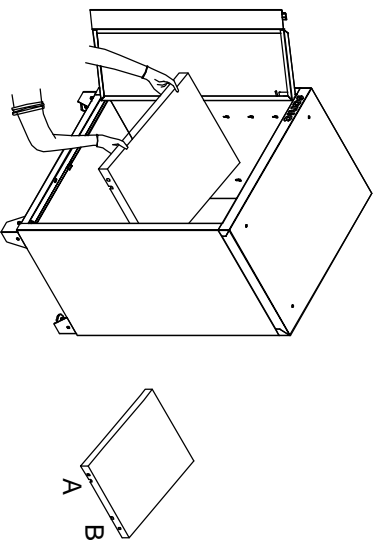


### 2.ADJUST LEVELER

Adjust the levelers and make the whole unit to stable state.

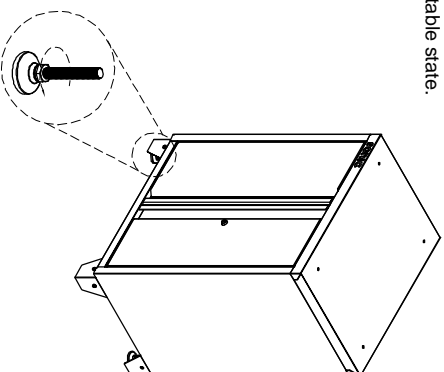


### 3.PRE-DRILL HOLES OF SS WORK PLATE

Pre-drill four small holes under the SS work plate for easily installing.

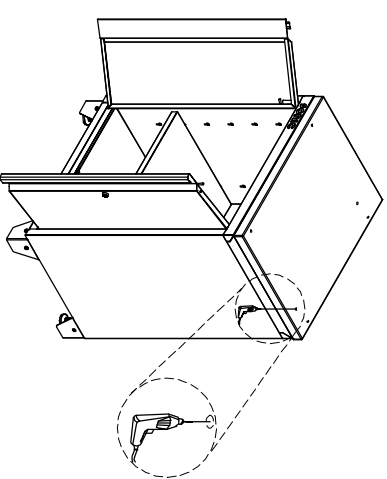

### 3.INSTALL SS WORK PLATE

Position the SS work plate on the top of cabinet. Open the 2-door cabinet. Insert the Hexagon bolt with flange screw(M6X25) through the top of cabinet, and into the bottom of the SS worktop. Tighten securely.

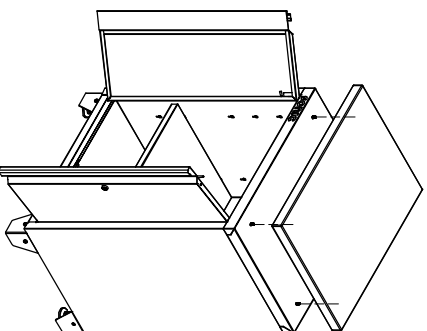

### 4.INSTALL SKIRTING BOARDS

Position the skirting boards on the legs of cabinets. Insert the truss head screw ( M6X12, stainless ) through the legs. Tighten securely. Repeat the steps for other skirting boards.

