



PARTS LIST

Ref#	Description	Part#	QTY
1	Hexagon bolt with flange screw (M6X25)		12 pcs
2	26"Frame of Cabinet with door	47308	1 pc
3	26"Closet frame	47288	1 pc
4	26"Skirting board	47289	2 pcs
5	86"SS work plate	47385	1 pc
6	26" & 34" closet side board	47389	1 pc
7	26"Portable cabinet	47451	1 pc

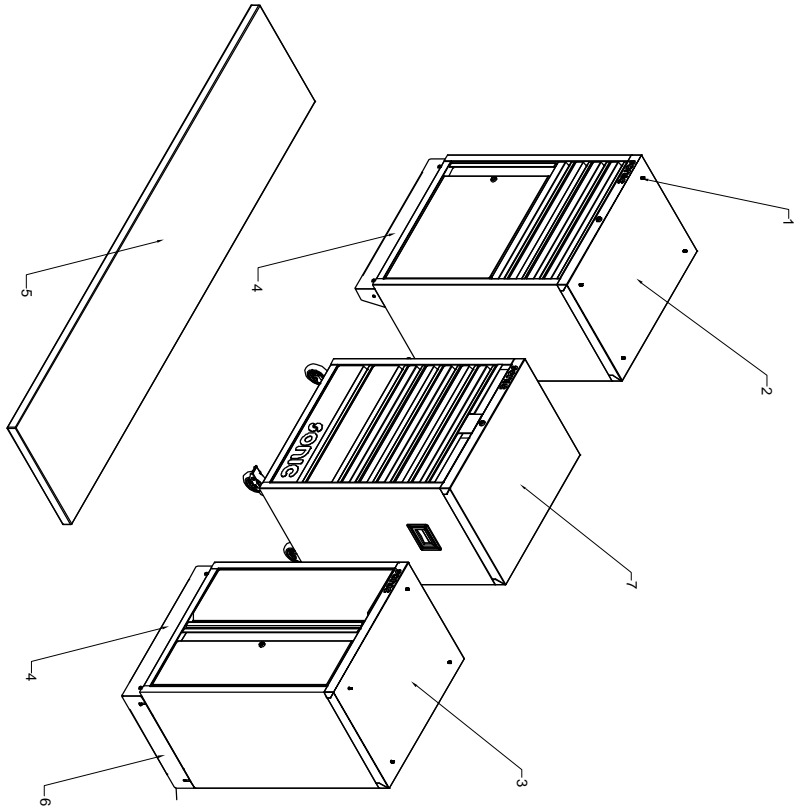


**1. INSTALL ADJUSTABLE SHELF**

Decide the height of the adjustable shelf onto the tongues on both side panels. Insert the bolts into the side panels. Place the shelf on the bolts. Make sure slot B go into box first.

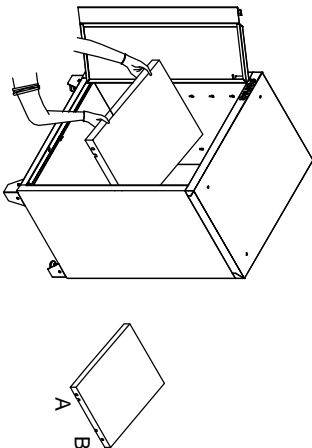


**2. ADJUST LEVELER**

Adjust the levelers and make the whole unit to stable state.

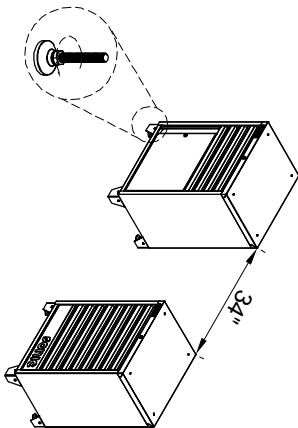


**3. PRE-DRILL HOLES OF SS WORK PLATE**

Pre-drill eight small holes under the SS work plate for easily installing.

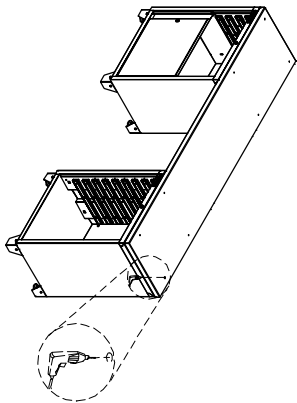


**4. INSTALL SS WORK PLATE**

Position the SS work plate on the top of cabinets. Remove the top drawer of cabinet. Insert the Hexagon bolt with flange screws (M6X25) through the top of cabinet, and into the bottom of the SS worktop. Tighten securely. Reinstall the drawers.

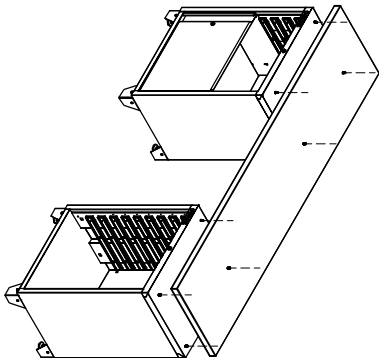

**5. INSTALL SKIRTING BOARDS**

Position the skirting boards on the legs of cabinets. Insert the Truss head screw ( M6X12, stainless ) through the legs. Tighten securely. Repeat the steps for other skirting boards.

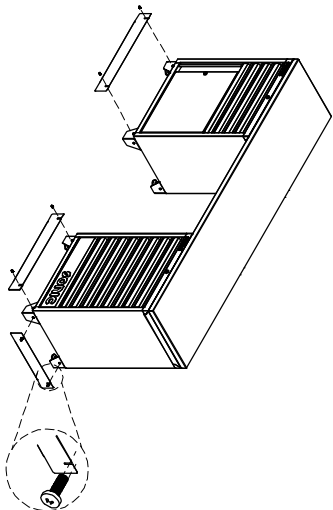

**6. Put the 26" portable cabinet under the worktop.**

