


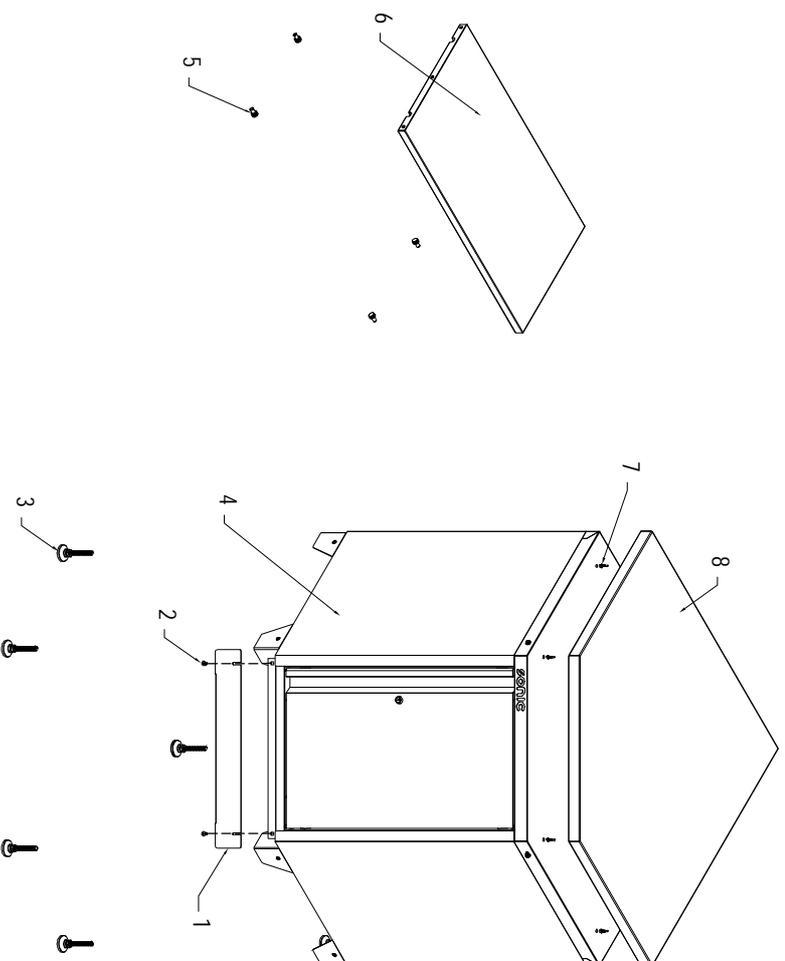

**PARTS LIST**


Ref#	Description	Part#	QTY
1	Front Skirting board	47541	1 pc
2	Phillipps Head Bolt(M6x12)	320023	2 pcs
3	Adjustable Feet	313004	5 pcs
4	34"Corner frame	47505	1 pc
5	Shelf Support	312001	4 pcs
6	Shelf	47543	1 pc
7	Hexagon bolt with flange screw (M4.8X25)	320122	7 pcs
8	Wooden Work plate	47544	1 pc





1. INSTALL WOODEN WORK PLATE

Position the wooden work plate on the top of cabinets.  
Remove the door. screw the hexagon bolt with flange screws (M4.8X25) through the top of cabinet by an electric screw driver into the bottom of the wooden worktop. Tighten securely. Reinstall the door.

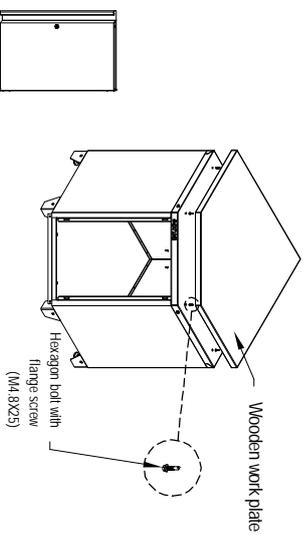

2. INSTALL SKIRTING BOARD

Position the skirting boards on the front of cabinets.  
Insert the Phillips head bolt ( M6X12, stainless ) through the legs. Tighten securely.

