



**PARTS LIST**

Ref#	Description	Part#	QTY
1	36"Double door locker	47433	1 pc
2	Hexagon bolt with flange screw (M6X25)		12 pcs
3	34"Cabinet frame	47296	1 pc
4	34"Cupboard	47292	2 pcs
5	Pipe ( 30X30mm )	47284	2 pcs
6	Truss head screw ( M6X12,stainless )		16 pcs
7	34"Hanger board	47380	2 pcs
8	HEX socket head cap screw with washer ( M6X16 )		8 pcs
9	Pipe ( 60X30mm )	47283	1 pc
10	HEX socket head cap screw ( M8X20 )		12 pcs
11	M6x16 Hex flange bolt	321006	4 pcs
12	M6 Hex Nylon locknut	323112	4 pcs
13	34"Closet frame	47302	1 pc
14	34"Closet side board	47389	1 pc
15	34"Skirting board	47303	2 pcs
16	68"SS work plate	47448	1 pc
17	24"Skirting side board	47310	1 pc
18	36"Skirting board	47437	1 pc

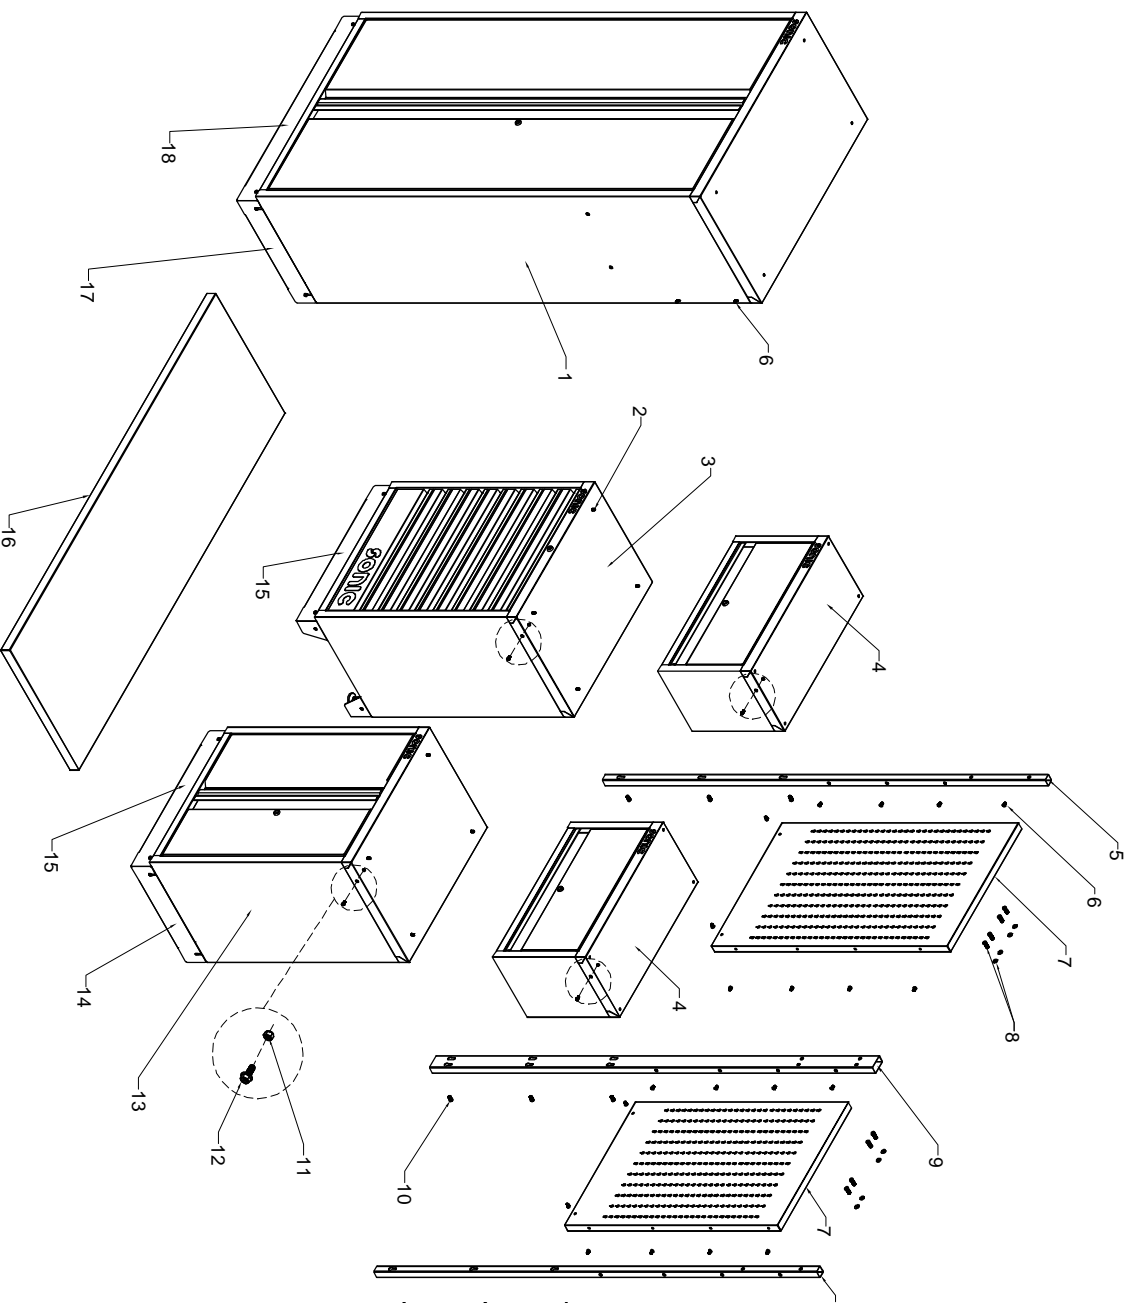


## 1. INSTALL ADJUSTABLE SHELF

Decide the height of the adjustable shelf onto the tongues on both side panels. Insert the bolts into the side panels. Place the shelf on the bolts. Make sure slot B go into box first.

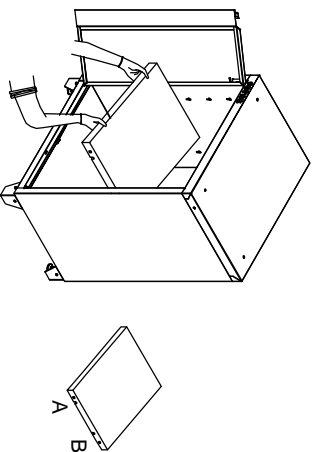


## 2. INSTALL PIPES

Simply position the pipes over the holes on the cabinets and attach with the bolts provided. Tighten HEX socket head cap screws( M8X20) securely.

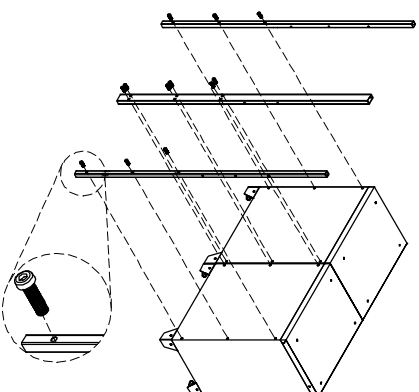



## 3. INSTALL HANGER BOARD

Simply position the hanger board over the holes and attach with the bolts provided. Tighten truss head screws( M6X12, stainless) securely.

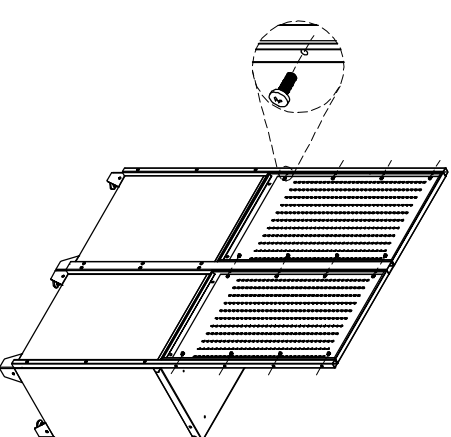


## 4. ADJUST LEVELER

Adjust the levelers and make the whole unit to stable state.

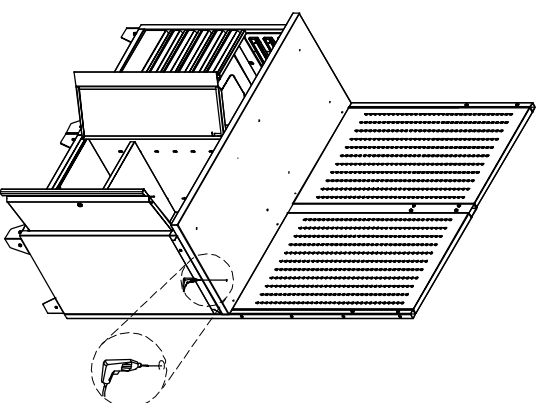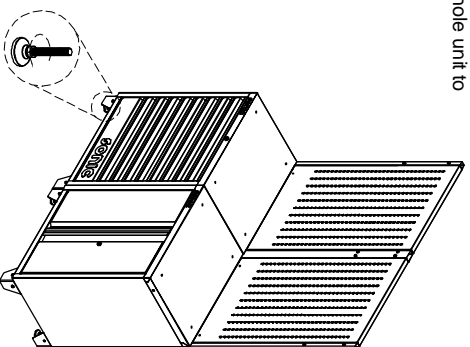

## 5. PRE-DRILL HOLES OF SS WORK PLATE


Pre-drill eight small holes under the SS work plate for easily installing. Repeat the steps for the back of SS work plate(only four holes).

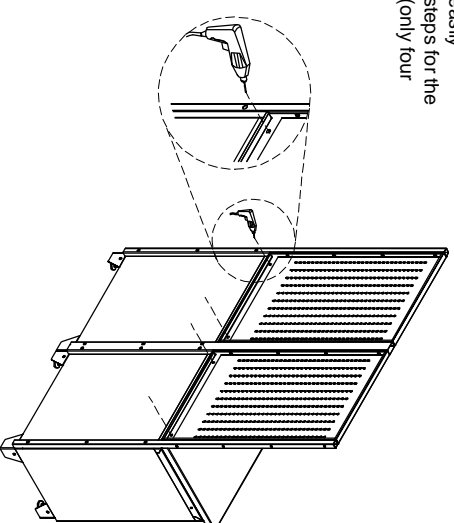


**ASSEMBLY INSTRUCTIONS**

**6. INSTALL SS WORK PLATE**

Position the SS work plate on the top of cabinets. Remove the top drawer of cabinet and open the 2-door cabinet. Insert the hexagon bolt with flange screw (M6X25) through the top of cabinet, and into the bottom of the SS worktop. Tighten securely. Reinstall the drawers.

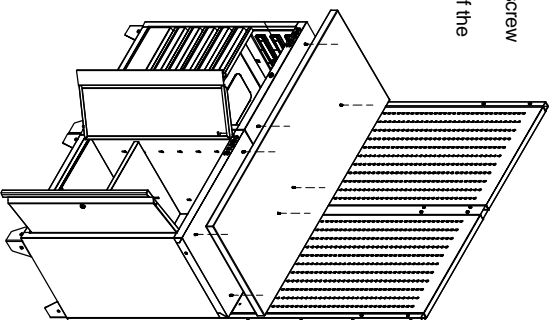


Insert the hexagon bolt with flange screw (M6X25) through the back of hauger boards, and into the side of SS work plate. Tighten securely.

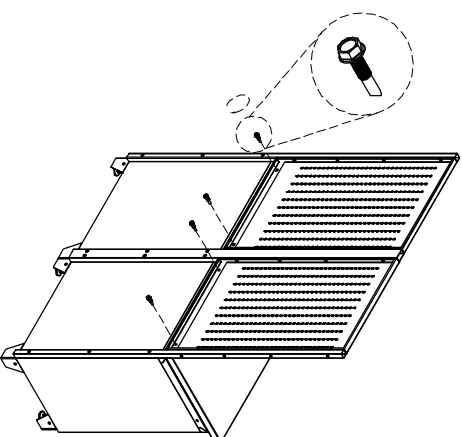


**7. INSTALL CUPBOARD**

Hang the cupboards onto the screws and attach with the HEX socket head cap screws (M6X16) provided. Tighten securely.

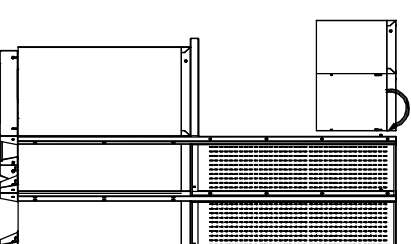



**9. INSTALL LOCKER**

Insert the truss head screws (M6X12) through the pipe (30X30mm). Tighten securely.

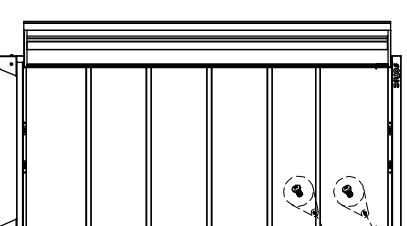


**8. INSTALL FOUR ADJUSTABLE SHELVES**

Decide the height of the adjustable shelf onto the tongues on both side panels. Insert the bolts into the side panels. Place the shelf on the bolts. Make sure slot B go to locker first. The top one is fixed, and the others are adjustable.

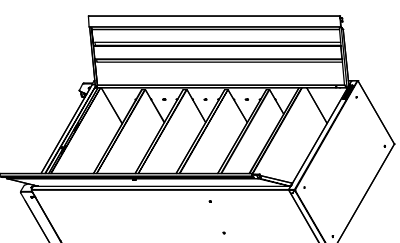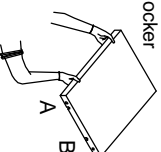

## 10. INSTALL SKIRTING BOARDS

Position the skirting boards on the legs of cabinets. Insert the truss head screw ( **M6x12, stainless** ) through the legs. Tighten securely. Repeat the steps for other skirting boards.

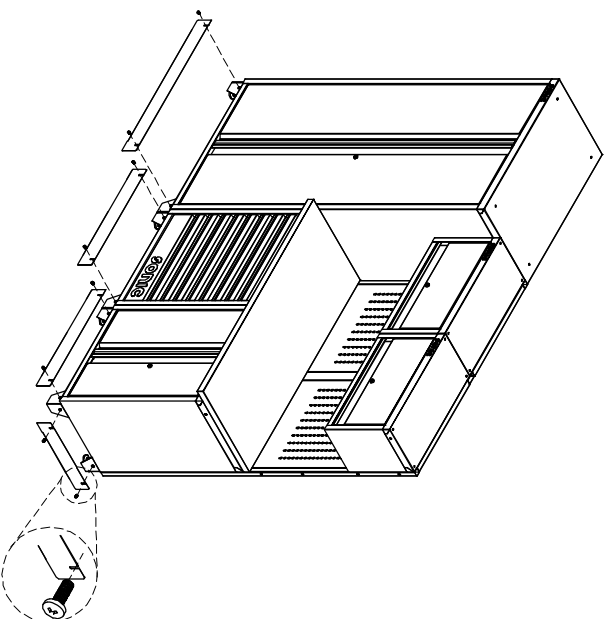

## 10. CONNECT THE CABINETS, CONNECT THE CUPBOARDS

Remove the top drawer of cabinet. Insert M6x16 Hex flange bolts with M6 Hex Nylon locknuts between two cabinets. Insert M6x16 Hex flange bolts with M6 Hex Nylon locknuts between two cupboards.

