


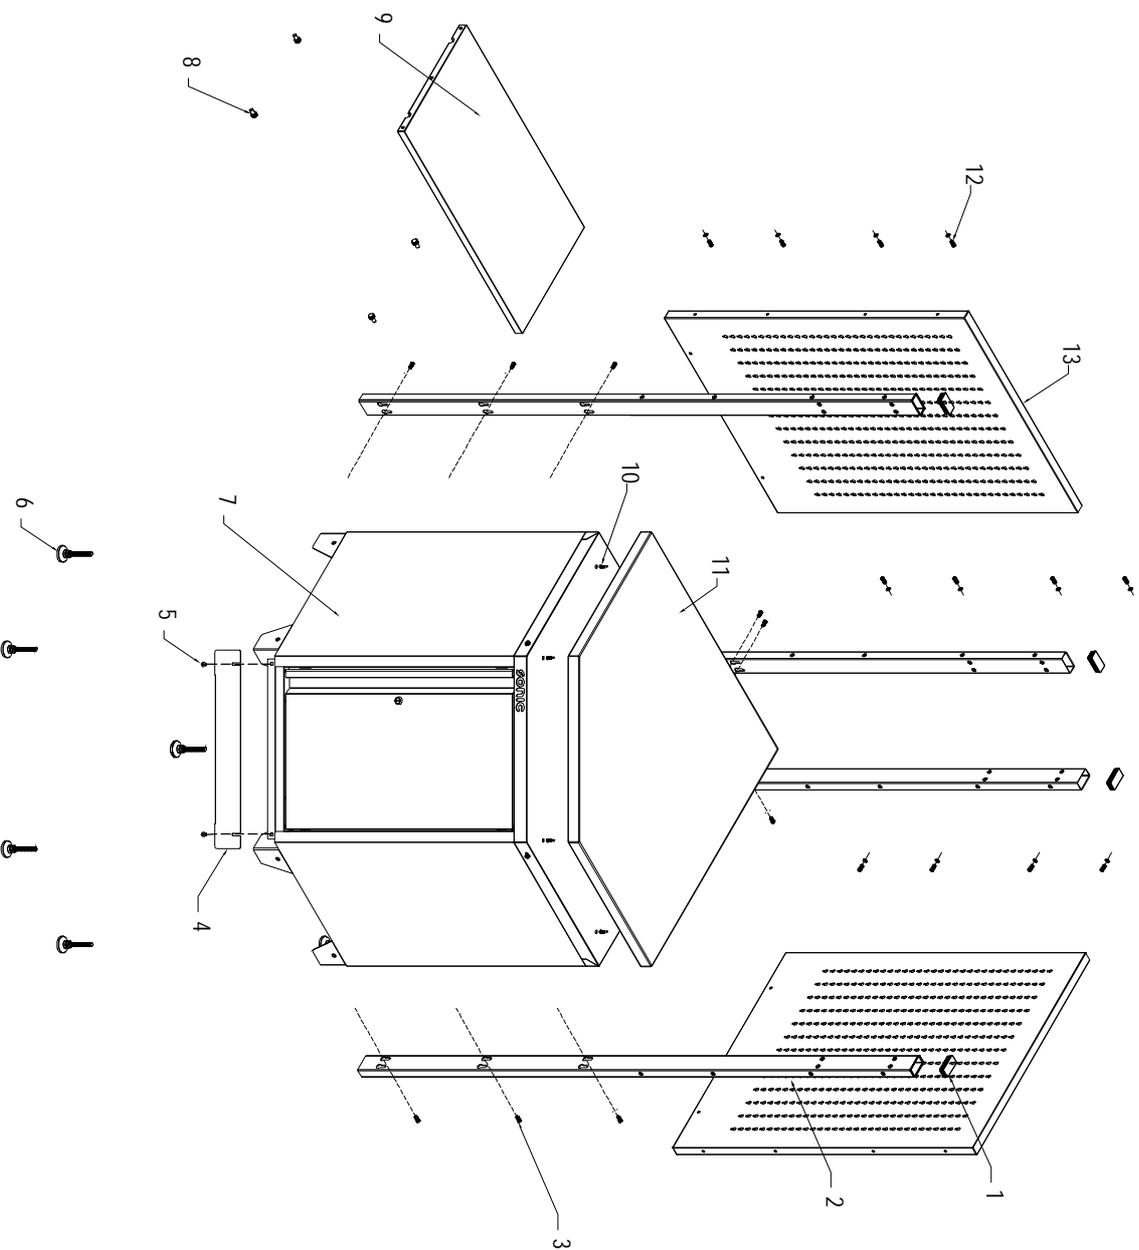

PARTS LIST


Ref#	Description	Part#	QTY
1	End Cap	314010	4 pcs
2	Pipe (60X30mm)	47283	4 pcs
3	HEX socket head cap screw (M8X20)	320113	15 pcs
4	Front Skirting board	47541	1 pc
5	Phillips Head Bolt(M6x12)	320023	2 pcs
6	Adjustable Feet	313004	5 pcs
7	34"Corner frame	47505	1 pc
8	Shelf Support	312001	4 pcs
9	Shelf	47543	1 pc
10	Hexagon bolt with flange screw (M4.8X25)	320122	7 pcs
11	SS Work plate	47545	1 pc
12	Phillips Head Bolt(M6x12)with washer	320023	16 sets
13	34"Hanger board	48380	2 pcs



ASSEMBLY INSTRUCTIONS


1. INSTALL THE PIPE

Simply position the pipes over the holes on the cabinets and attach with the bolts provided. Tighten HEX socket head cap screws (**M8X20**) securely.

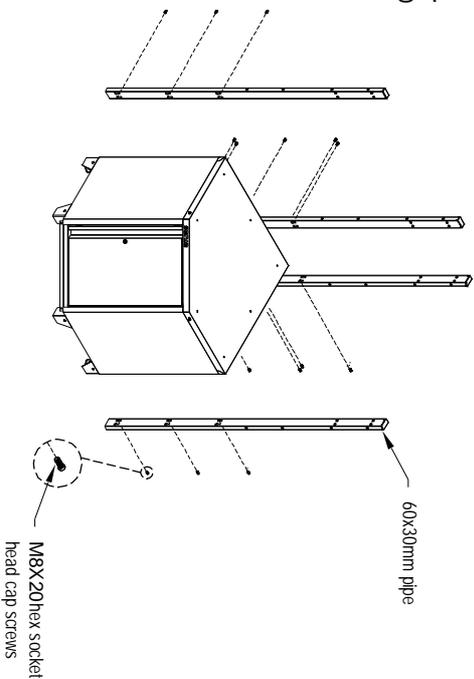


2. INSTALL HANGER BOARD

Simply position the hanger board over the holes and attach with the bolts provided. Phillips head bolt(**M6X12, stainless**) securely.

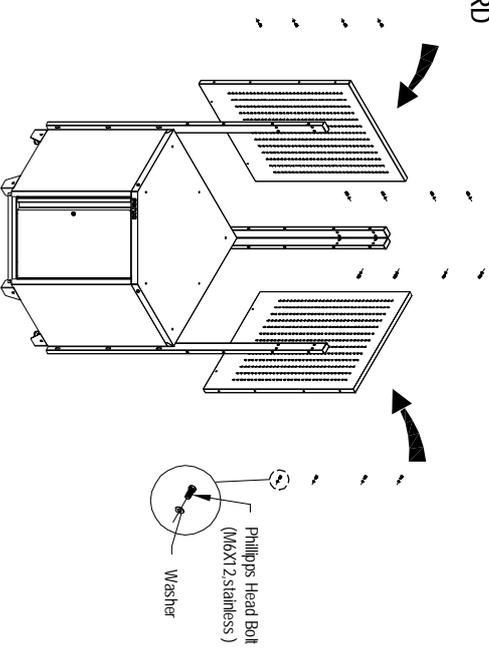

3. INSTALL SS WORK PLATE

Position the SS work plate on the top of cabinets. Remove the door. Screw the hexagon bolt with flange screws (**M4.8X25**) through the top of cabinet by an electric driver into the bottom of the SS worktop. Tighten securely. Reinstall the door.

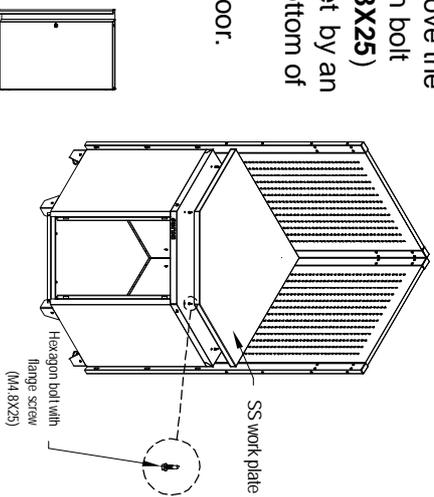

4. INSTALL SKIRTING BOARD

Position the skirting boards on the front of cabinets. Insert the Phillips head bolt (**M6X12, stainless**) through the legs. Tighten securely.

