


PARTS LIST


Ref#	Description	Part#	QTY
1	Hexagon bolt with flange screw (M6X25)	321177	12 pcs
2	26"Frame of Cabinet with door	47308	1 pc
3	26"Cabinet frame	47280	1 pc
4	34"Cabinet frame	47296	1 pc
5	26"Skirting board	47289	2 pcs
6	86"SS work plate	47385	1 pc
7	34"Skirting board	47303	1 pc
8	26"&34"closet side board	47389	1 pc

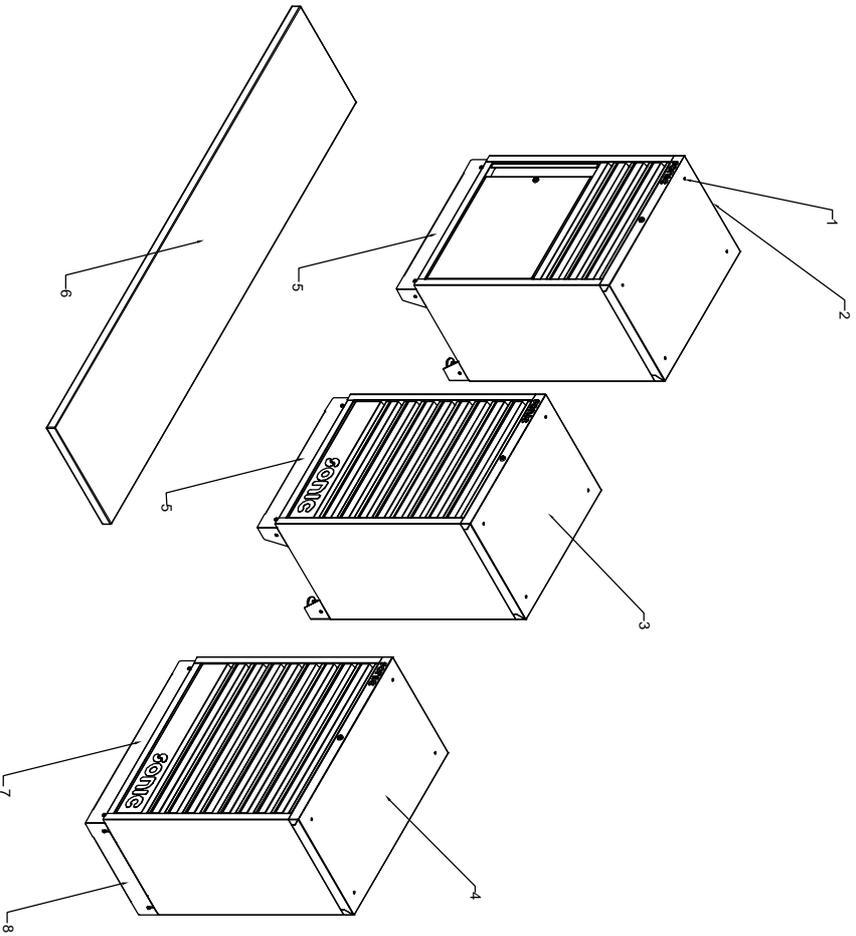

ASSEMBLY INSTRUCTIONS


1. ADJUST LEVELER

Adjust the levelers and make the whole unit to stable state.

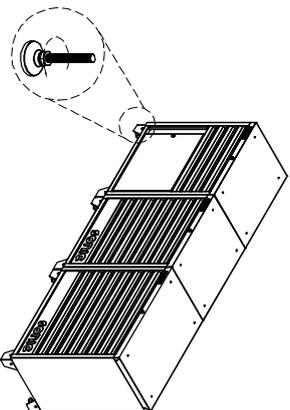


2. PRE-DRILL HOLES OF SS WORK PLATE

Pre-drill twelve small holes under the SS work plate for easily installing.

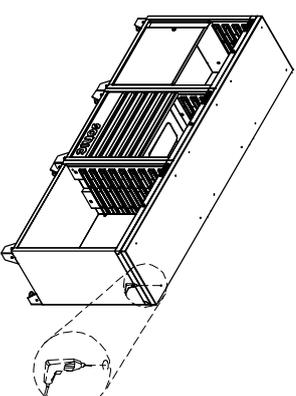

3. INSTALL SS WORK PLATE

Position the SS work plate on the top of cabinets. Remove the top drawer of cabinet. Insert the Hexagon bolt with flange screws (M6X25) through the top of cabinet, and into the bottom of the SS worktop. Tighten securely. Reinstall the drawers.

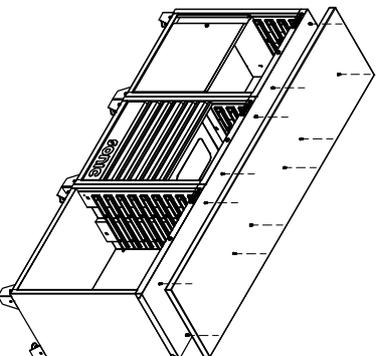

4. INSTALL SKIRTING BOARDS

Position the skirting boards on the legs of cabinets. Insert the Truss head screw (M6X12, stainless) through the legs. Tighten securely. Repeat the steps for other skirting boards.

