



PARTS LIST

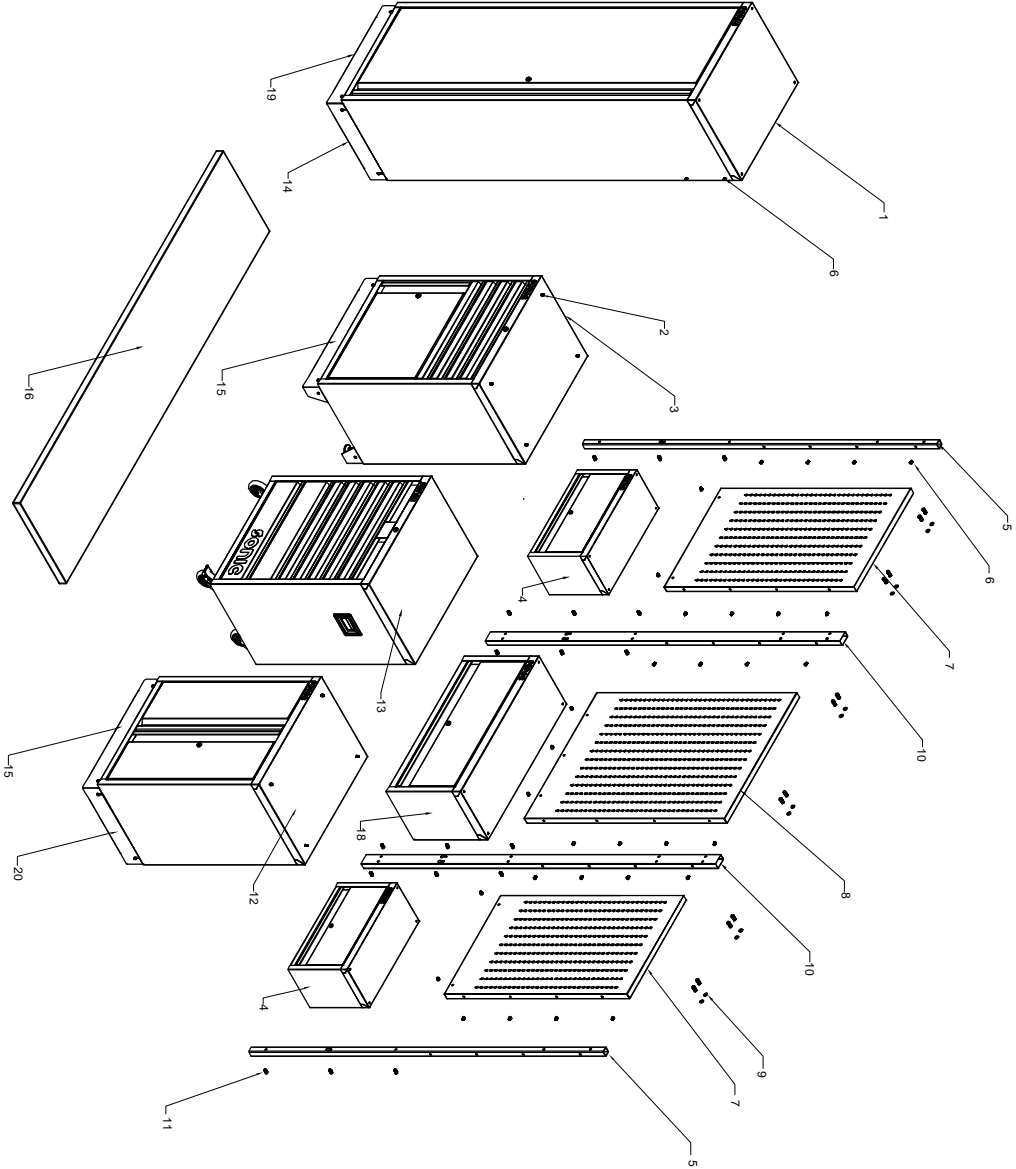

| Ref# | Description   | Part# | QTY    |
|------|---|-------|--------|
| 1    | 24"Locker   | 47272 | 1 pc   |
| 2    | Hexagon bolt with flange<br>screw (M6X25)             |       | 18 pcs |
| 3    | 26"Frame of Cabinet<br>with door                      | 47308 | 1 pc   |
| 4    | 26"Cupboard   | 47276 | 2 pcs  |
| 5    | Pipe ( 30X30mm )                                      | 47284 | 2 pcs  |
| 6    | Truss head screw<br>( M6X12, stainless )              |       | 24 pcs |
| 7    | 26"Hanger board                                       | 47376 | 2 pcs  |
| 8    | 34"Hanger board                                       | 47380 | 1 pc   |
| 9    | HEX socket head cap<br>screw with washer<br>( M6X16 ) |       | 12 pcs |
| 10   | Pipe ( 60X30mm )                                      | 47283 | 2 pcs  |
| 11   | HEX socket head cap<br>screw ( M8X20 )                |       | 18 pcs |
| 12   | 26"Closet frame                                       | 47288 | 1 pc   |
| 13   | 26"Portable cabinet                                   | 47451 | 1 pc   |
| 14   | 24"Skirting side board                                | 47310 | 1 pc   |
| 15   | 26"Skirting board                                     | 47289 | 2 pcs  |
| 16   | 86"SS work plate                                      | 47385 | 1 pc   |
| 17   | 34"Skirting board                                     | 47303 | 1 pc   |
| 18   | 34"Cupboard   | 47292 | 1 pc   |
| 19   | 24"Skirting board                                     | 47275 | 1 pc   |
| 20   | 26"&34"Closet side<br>board                           | 47389 | 1 pc   |


### 1. INSTALL ADJUSTABLE SHELF

Decide the height of the adjustable shelf onto the tongues on both side panels. Insert the bolts into the side panels. Place the shelf on the bolts. Make sure slot B go into box first.

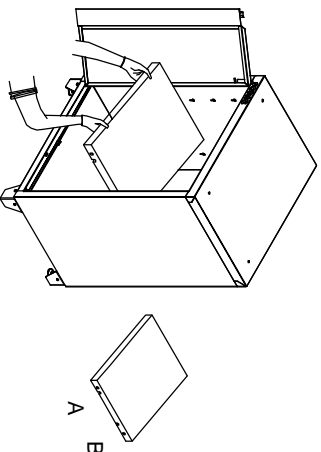


### 2. INSTALL PIPES

Simply position the pipes over the holes on the cabinets and attach with the bolts provided. Tighten HEX socket head cap screws( **M8X20**) securely.

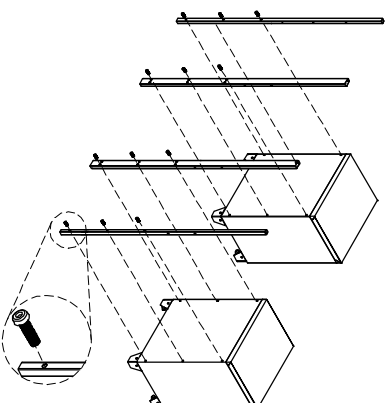


### 3. INSTALL HANGER BOARD

Simply position the hanger board over the holes and attach with the bolts provided. Tighten truss head screws( **M6X12, stainless**) securely.

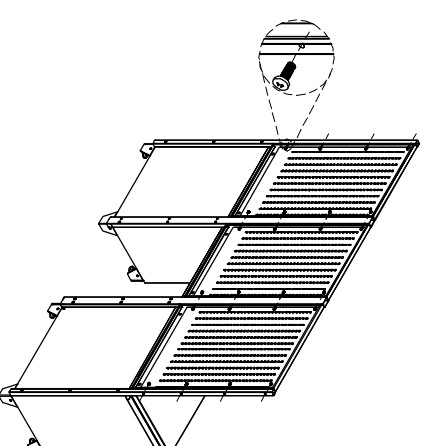



### 4. ADJUST LEVELER

Adjust the levelers and make the whole unit to stable state.

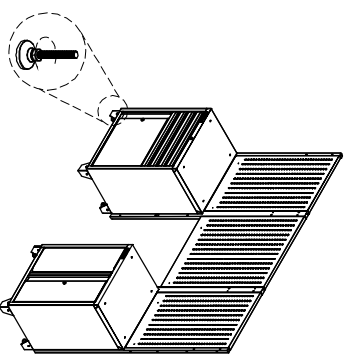

### 5. PRE-DRILL HOLES OF SS WORK PLATE


Pre-drill twelve small holes under the SS work plate for easily installing. Repeat the steps for the back of SS work plate(only six holes).

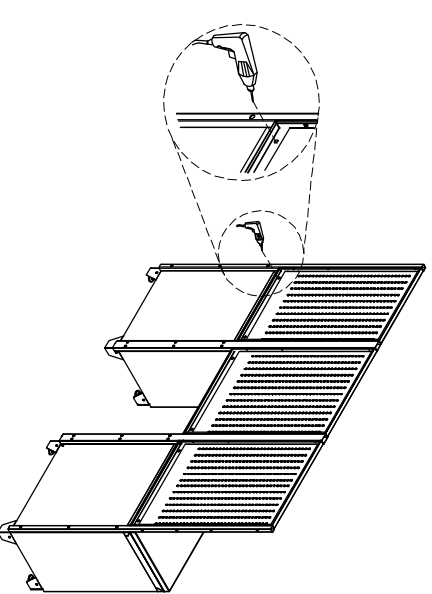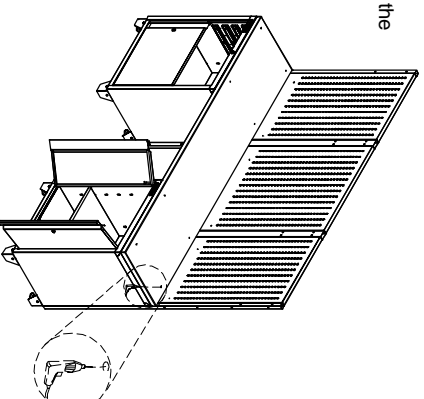


ASSEMBLY INSTRUCTIONS

## 6.INSTALL SS WORK PLATE

Position the SS work plate on the top of cabinets. Remove the top drawer of cabinet and open the 2-door cabinet. Insert the Hexagon bolt with flange screws (M6X25) through the top of cabinet, and into the bottom of the SS worktop. Tighten securely. Reinstall the drawers.

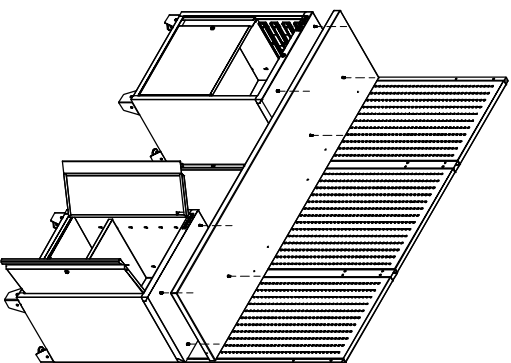


Insert the Hexagon bolt with flange screws(M6X25) through the back of hauger boards, and into the side of SS work plate. Tighten securely.

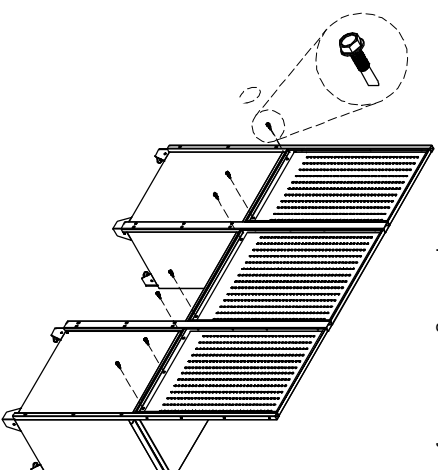



## 7.INSTALL CUPBOARD

Hang the cupboards onto the screws and attach with the HEX socket head cap screws(M6X16) provided. Tighten securely.

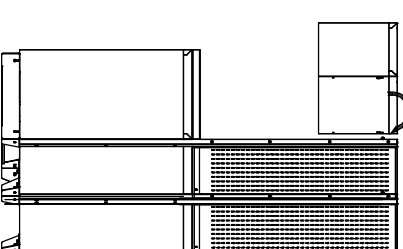



## 8.INSTALL FOUR ADJUSTABLE SHELVES

Decide the height of the adjustable shelf onto the tongues on both side panels. Insert the bolts into the side panels..Place the shelf on the bolts. Make sure slot B go to locker first. The top one is fixed,and the others are adjustable.

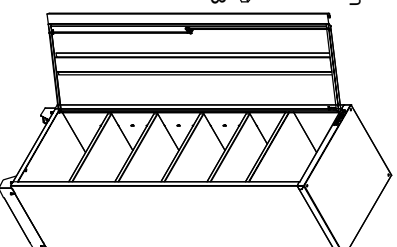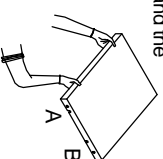


## 9.INSTALL LOCKER

Insert the truss head screws(M6X12) through the pipe(30X30mm). Tighten securely.

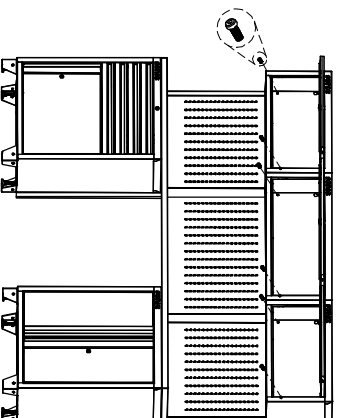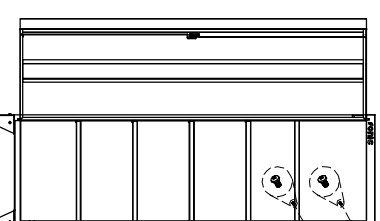

## 10. INSTALL SKIRTING BOARDS

Position the skirting boards on the legs of cabinets. Insert the Truss head screw ( **M6X12, stainless** ) through the legs. Tighten securely. Repeat the steps for other skirting boards.

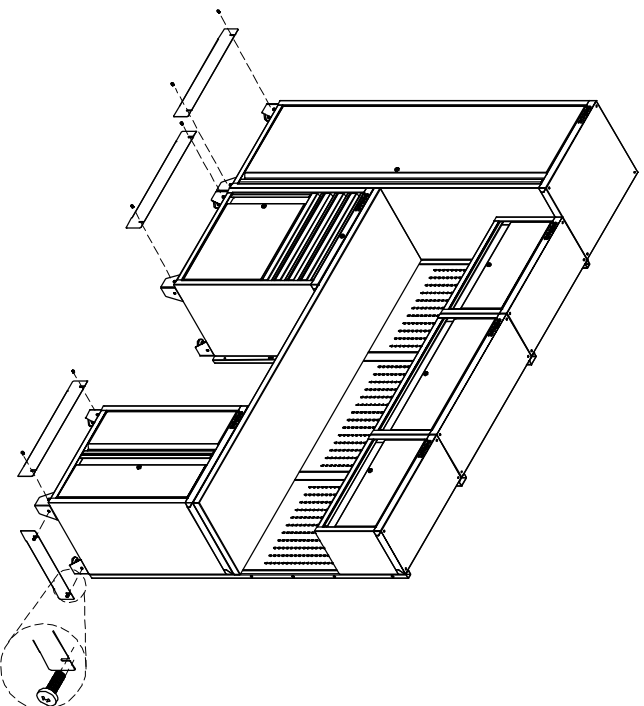

## 11. Put the 26" portable cabinet under the worktop.

