


PART LIST


| Ref# | Description | Part# | QTY |
|------|---|-------|--------|
| 1 | Hexagon bolt with flange screw (M6X25) | | 12 pcs |
| 2 | 26"Cabinet frame | 47280 | 1 pc |
| 3 | Pipe (30X30mm) | 47284 | 2 pcs |
| 4 | Truss head screw (M6X12,stainless) | | 8 pcs |
| 5 | 26"Hanger board | 47376 | 1 pc |
| 6 | HEX socket head cap screw (M8X20) | | 6 pcs |
| 7 | 26"Skirting board | 47289 | 1 pc |
| 8 | 26"Wooden work plate | 47279 | 1 pc |
| 9 | 26"Closet side board | 47389 | 1 pc |

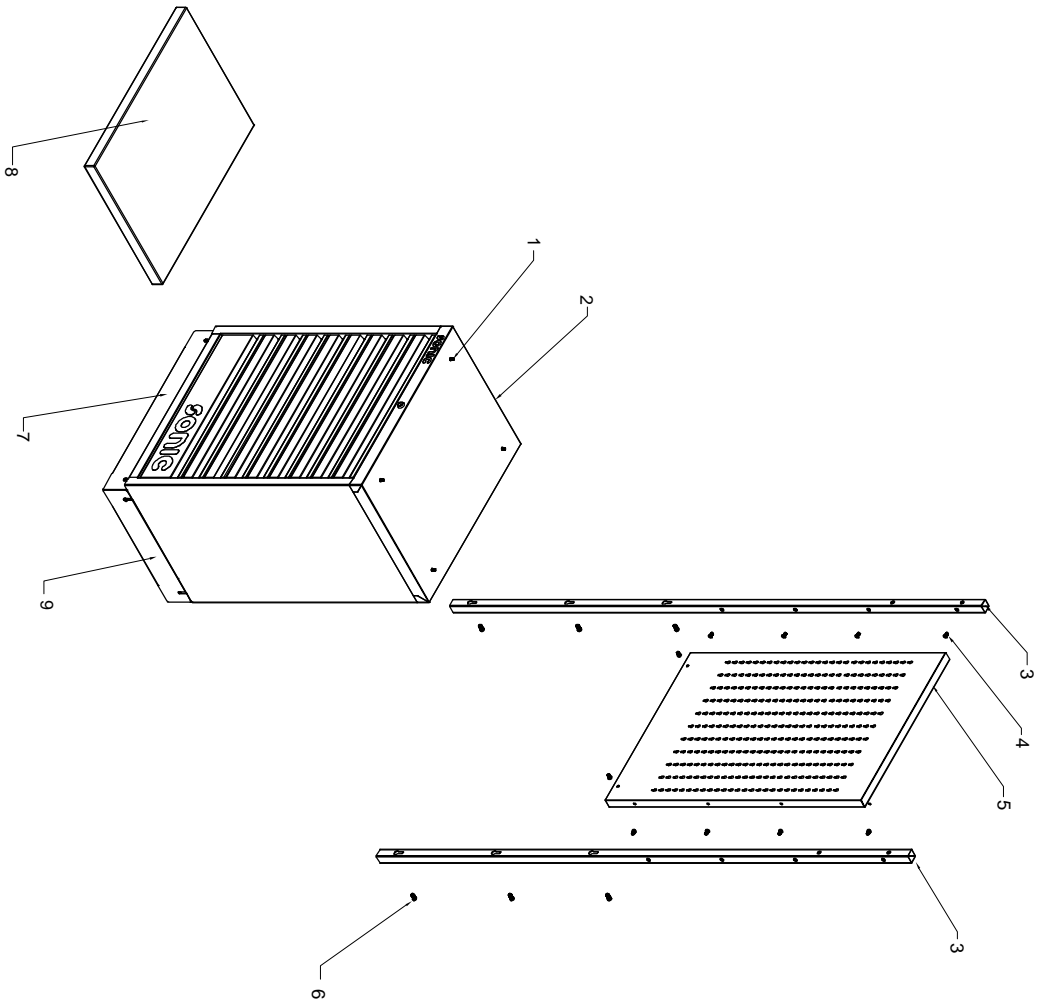

ASSEMBLY INSTRUCTIONS


1. INSTALL PIPES

Simply position the pipes over the holes on the cabinets and attach with the bolts provided. Tighten HEX socket head cap screws(M8X20) securely.

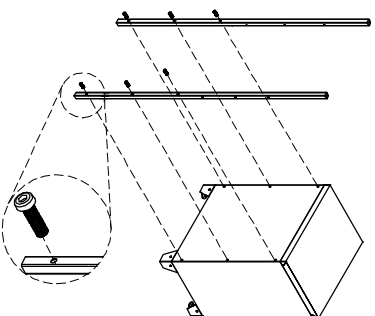


2. INSTALL HANGER BOARD

Simply position the hanger board over the holes and attach with the bolts provided. Tighten truss head screws(M6X12, stainless) securely.

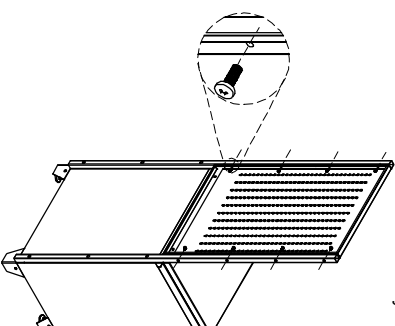


3. ADJUST LEVELER

Adjust the levelers and make the whole unit to stable state.

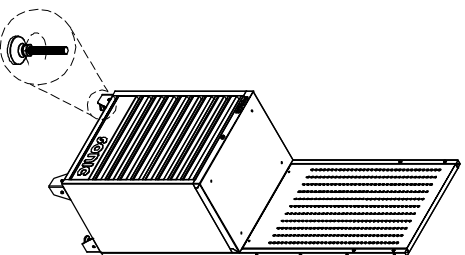

4. PRE-DRILL HOLES OF WOODEN WORK PLATE



Pre-drill four small holes under the wooden work plate for easily installing. Repeat the steps for the back of wooden work plate(only two holes).

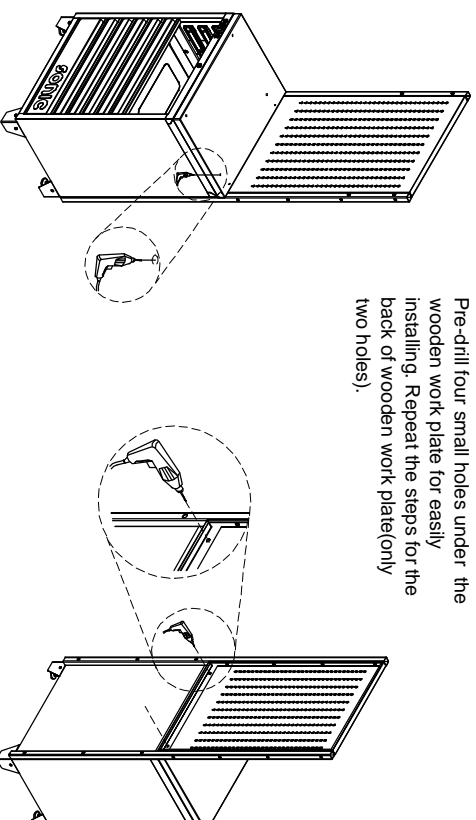

ASSEMBLY INSTRUCTIONS

5. INSTALL WOODEN WORK PLATE



Position the wooden work plate on the top of cabinets. Remove the top drawer of cabinet. Insert the Hexagon bolt with flange screw (M6X25) through the top of cabinet, and into the bottom of the wooden worktop. Tighten securely. Reinstall the drawers.

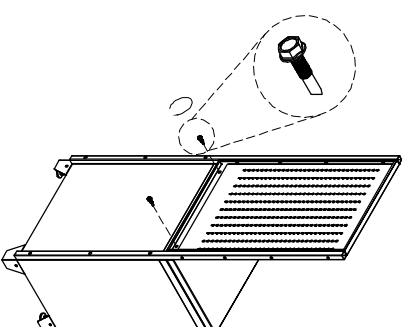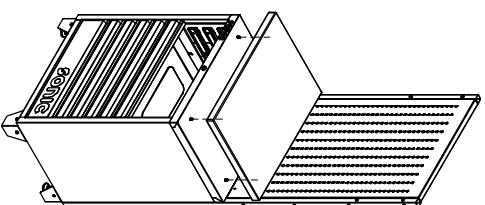

Insert the Hexagon bolt with flange screw (M6X25) through the back of hauger boards, and into the side of wooden work plate. Tighten securely.

6. INSTALL SKIRTING BOARDS

Position the skirting boards on the legs of cabinets. Insert the truss head screw (M6X12, stainless) through the legs. Tighten securely. Repeat the steps for other skirting boards.

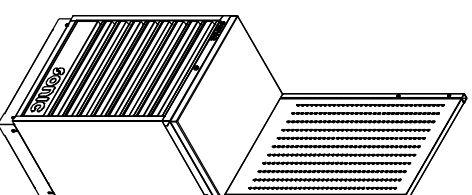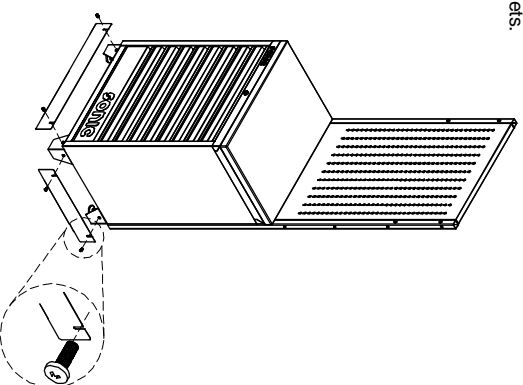

. 3.