


PARTS LIST

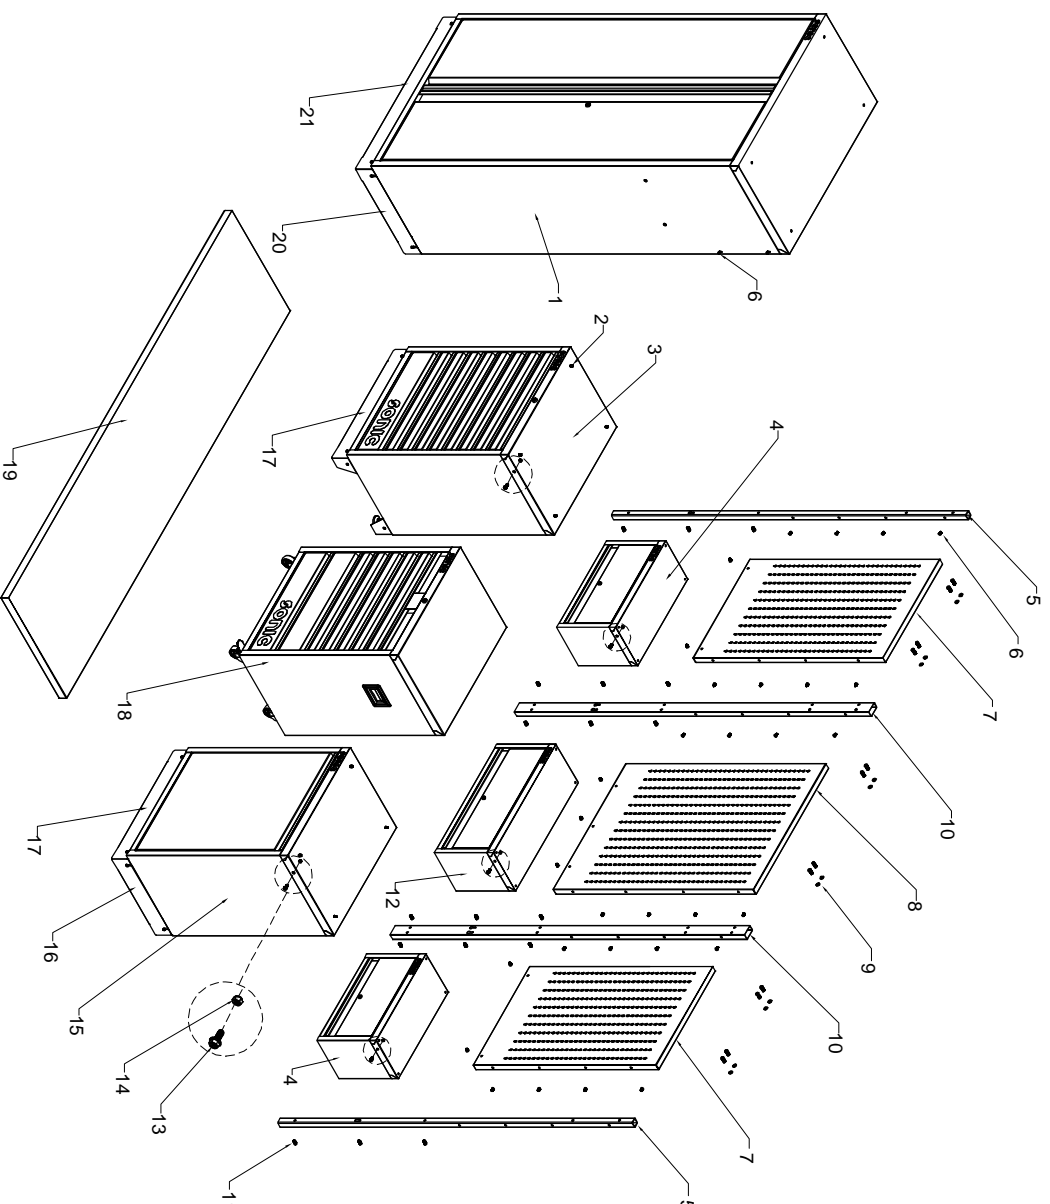


Ref#	Description	Part#	QTY
1	36"Double door locker	47433	1 pc
2	Hexagon bolt with flange screw (M6X25)		18 pcs
3	26"Cabinet frame	47280	1 pc
4	26"Cupboard	47276	2 pcs
5	Pipe (30X30mm)	47284	2 pcs
6	Truss head screw (M6X12,stainless)		24 pcs
7	26"Hanger board	47376	2 pcs
8	34"Hanger board	47380	1 pc
9	HEX socket head cap screw with washer (M6X16)		12 pcs
10	Pipe (60X30mm)	47283	2 pcs
11	HEX socket head cap screw (M8X20)		18 pcs
12	34"Cupboard	47292	1 pc
13	M6X16 Hex flange bolt	321006	5 pcs
14	M6 Hex Nylon locknut	323112	5 pcs
15	26"Recycle bin	47450	1 pc
16	26"Skirting side board	47389	1 pc
17	26"Skirting board	47289	2 pcs
18	26"Portable cabinet	47451	1 pc
19	86"SS work plate	47449	1 pc
20	24"Skirting side board	47310	1 pc
21	36"Skirting board	47437	1 pc

ASSEMBLY INSTRUCTIONS


1. INSTALL PIPES

Simply position the pipes over the holes on the cabinets and attach with the bolts provided. Tighten HEX socket head cap screws(**M8X20**) securely.

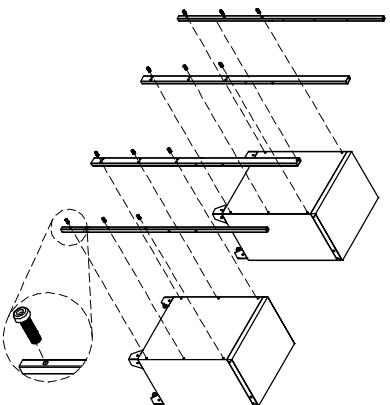


2. INSTALL HANGER BOARD

Simply position the hanger board over the holes and attach with the bolts provided. Tighten truss head screws(**M6X12, stainless**) securely.

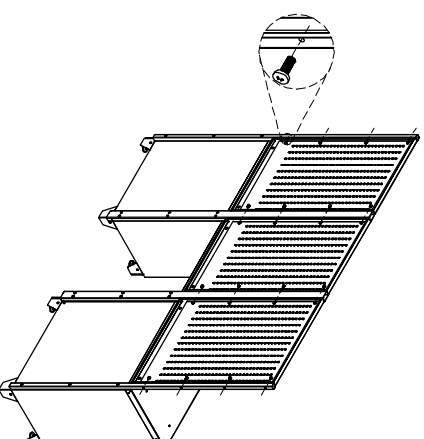



3. ADJUST LEVELER

Adjust the levelers and make the whole unit to stable state.

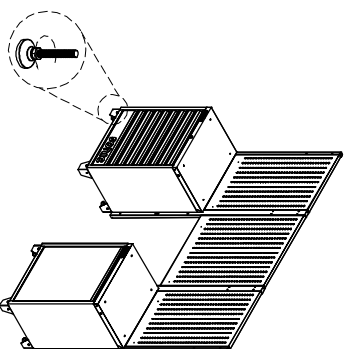

4. PRE-DRILL HOLES OF SS WORK PLATE


Pre-drill twelve small holes under the SS work plate for easily installing. Repeat the steps for the back of SS work plate(only six holes).

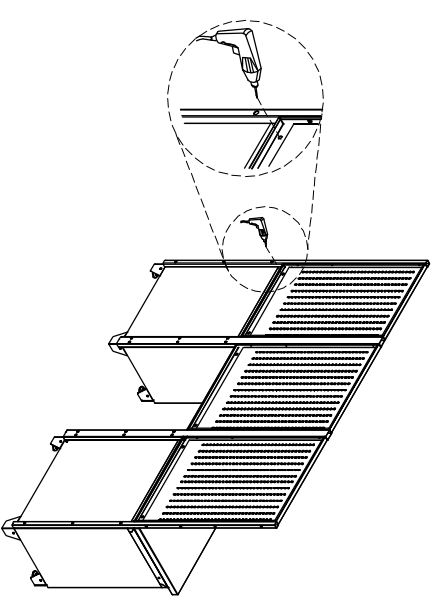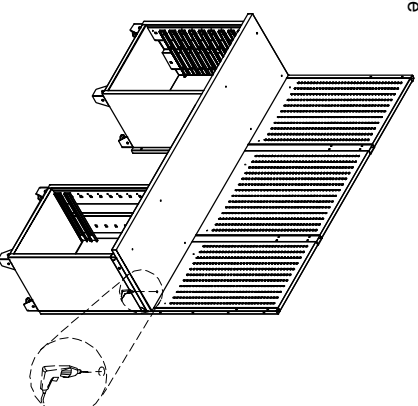


ASSEMBLY INSTRUCTIONS

5. INSTALL SS WORK PLATE

Position the SS work plate on the top of cabinets. Remove the top drawer of cabinet. Insert the Hexagon bolt with flange screws (M6X25) through the top of cabinet, and into the bottom of the SS worktop. Tighten securely. Reinstall the drawers.

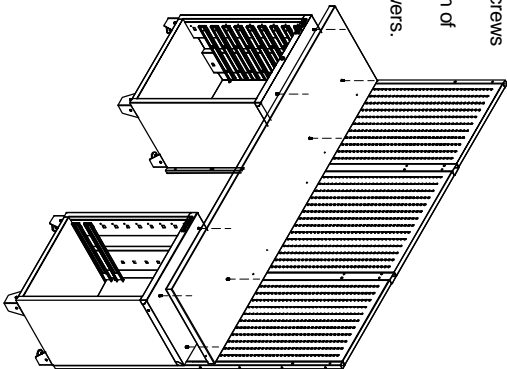


Insert the Hexagon bolt with flange screws (M6X25) through the back of hauger boards, and into the side of SS work plate. Tighten securely.

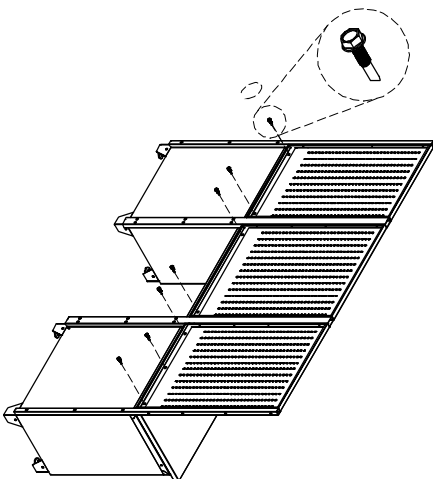


6. INSTALL CUPBOARD

Hang the cupboards onto the screws and attach with the HEX socket head cap screws (M6X16) provided. Tighten securely.

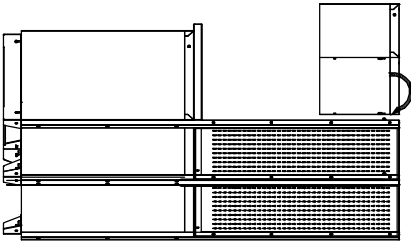




7. INSTALL FOUR ADJUSTABLE SHELVES

Decide the height of the adjustable shelf onto the tongues on both side panels. Insert the bolts into the side panels. Place the shelf on the bolts. Make sure slot B go to locker first. The top one is fixed, and the others are adjustable.

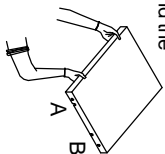


8. INSTALL LOCKER

Insert the truss head screws (M6X12) through the pipe (30X30mm). Tighten securely.

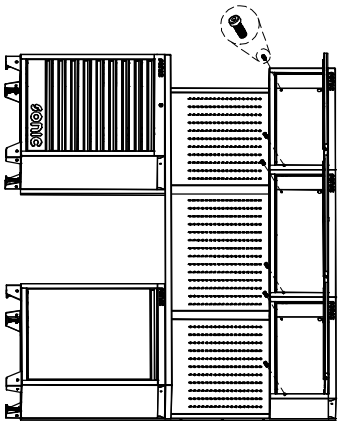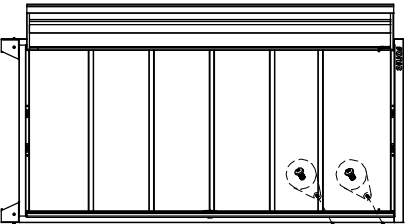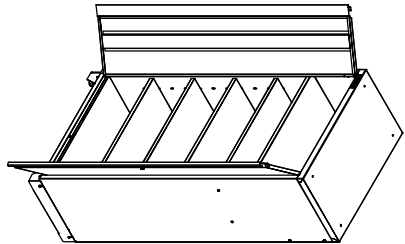


9. INSTALL SKIRTING BOARDS

Position the skirting boards on the legs of cabinets. Insert the Truss head screw (**M6X12, stainless**) through the legs. Tighten securely. Repeat the steps for other skirting boards.

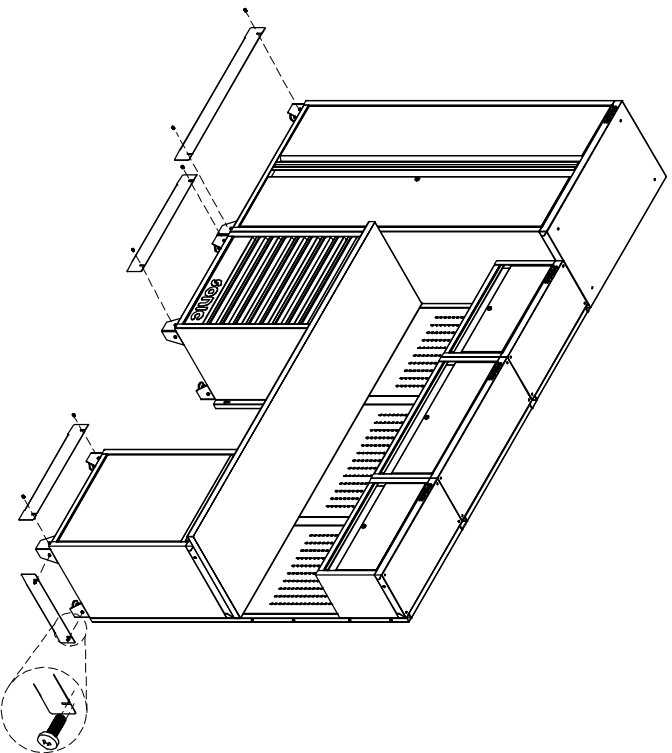

10. Put the 26" portable cabinet under the worktop.

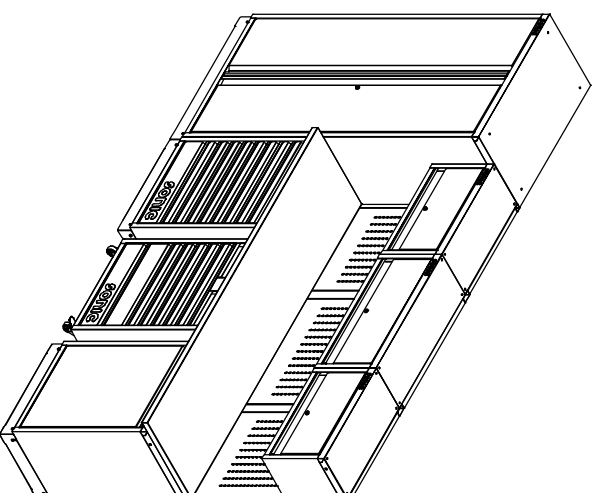

11. CONNECT THE CUPBOARDS.

Insert M6x16 Hex flange bolts with M6 Hex Nylon locknuts between two cupboards.

